



Instructions for the OPENING and  
CLOSING  
of the CONVERTIBLE - TOP


DRAUZ K.C.  
BREMEN GERMANY

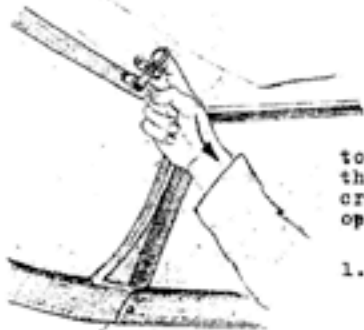


In order to prevent a collision between the frame of the Convertible-top and the door-window when the top is being opened either the door-window must be cranked down or both doors opened.

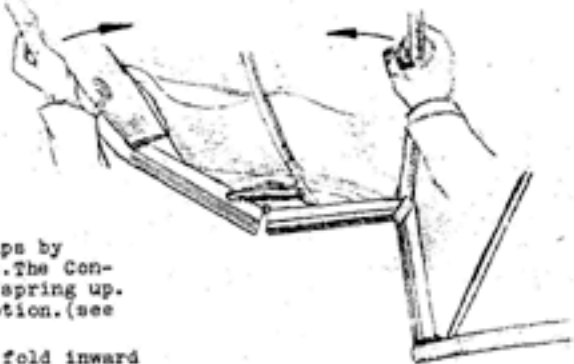

- 1.) Unfasten the top's clamps by pulling down the levers. The Convertible-top will then spring up. Continue this upward motion. (see picture 2).
- 2.) The sides of the frame fold inward and the forward part of the top will fold back on itself.

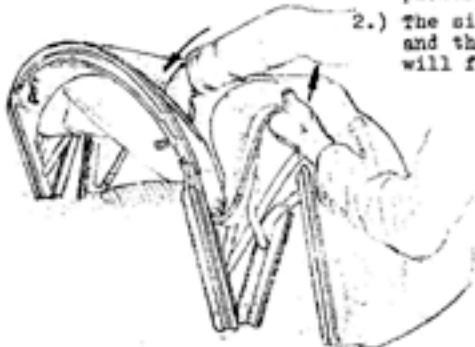

- 3.) Pull out the top on both sides from between the folding frame. Push it down in the middle between the bows.

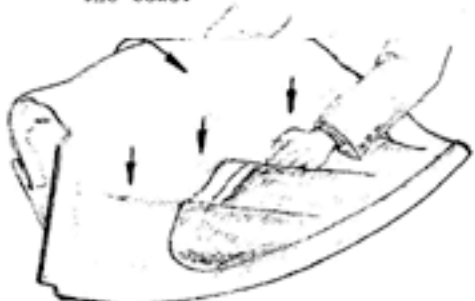


- 4.) Push together the front of the frame as the two bows are closed as closely as possible.



- 5.) Push down the rear half of the top with the flat of the hand. Be sure the rear window lies flat. Then fold back the top as indicated by arrows.



- 6.) Push the collapsed top into the rear section.

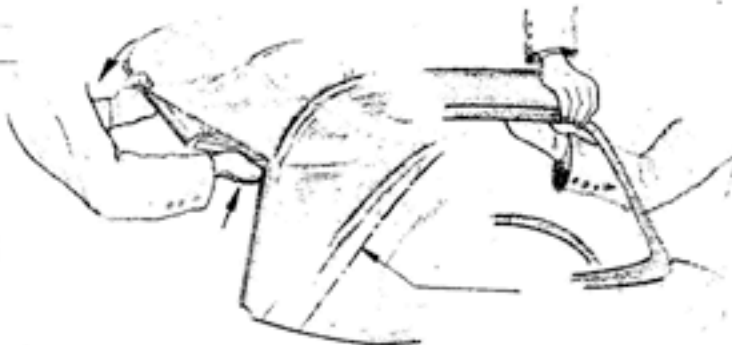

To put up the top proceed in opposite order. However, be careful that the rear bow is close by the seam. When opening the top the rear bow goes close behind the front bow.